

# ROLLER DRAWER KITCHEN



Part Number: **RDKNA1045**  
Product **ROLLER DRAWER KITCHEN 1045 NORTH AMERICA**  
Description:  
Suited to **WAGON/SUV VEHICLES**  
vehicle/s:

## PLEASE NOTE THE FOLLOWING:

- ◆ This product must be installed exactly as per these instructions using only the hardware supplied.
- ◆ In the event of damage to any component, contact your nearest authorised ARB stockist, Repairs or modifications must not be attempted.
- ◆ Do not remove labels from this product.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques.
- ◆ It is recommended that this product is only installed by trained personnel.
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer.
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components.
- ◆ Some components are heavy (17kg+) and require a 2 person lift.
- ◆ Work safely at all times.
- ◆ Unless otherwise instructed, tighten fasteners to specified torque.

## **ARB 4x4 ACCESSORIES**

### Corporate Head Office

42-44 Garden St  
Kilsyth, Victoria  
AUSTRALIA 3137

Tel: +61 (3) 9761 6622  
Fax: +61 (3) 9761 6807

Australian enquiries  
North & South American enquiries  
Other international enquiries

[sales@arb.com.au](mailto:sales@arb.com.au)  
[sales@arbusa.com](mailto:sales@arbusa.com)  
[exports@arb.com.au](mailto:exports@arb.com.au)

**[www.arb.com.au](http://www.arb.com.au)**

# GENERAL CARE AND MAINTENANCE

By choosing an ARB kitchen you have made a wise investment in a product that will give you many years of service.



- To keep your investment looking good it is recommended to clean your kitchen with a soft cloth and suitable stainless steel cleaning solution after each use. Do not use abrasive cleaning solutions or cloths as this will dull the surface and leave it susceptible to discolouring and corrosion.
- It is recommended that following exposure to salt air/spray and or other contaminants, the kitchen be thoroughly cleaned to prevent corrosion.
- As part of any Pre Trip Preparation, or on an annual basis, it is recommended that a thorough visual inspection of the vehicle is carried out, making sure that all bolts and other components are torqued to the correct specification. Replace any components as necessary. This service can be performed by your local authorized ARB Stockist.
- Servicing of the gas cooking unit should be carried out by a licensed plumber or authorised Thetford agent.

## FITTING REQUIREMENTS

### REQUIRED TOOLS FOR FITMENT OF PRODUCT:

BASIC TOOLS KIT	DRILL AND DRILL BITS
-----------------	----------------------

### HAVE AVAILABLE THESE SAFETY ITEMS WHEN FITTING PRODUCT:

Protective eyewear		Hearing protection	
--------------------	---	--------------------	---

**NOTE: 'WARNING' notes in the fitting procedure relate to OHS situations, where to avoid a potentially hazardous situation it is suggested that protective safety gear be worn or a safe work procedure be employed. If these notes and warnings are not heeded, injury may result.**

### FASTENER TORQUE SETTINGS:

SIZE	Torque Nm	Torque lbft
M6	9Nm	7lbft
M8	22Nm	16lbft
M10	44Nm	32lbft
M12	77Nm	57lbft

## PREPARE KITCHEN FOR INSTALLATION



Using a 4mm allen key remove the 8 x M6 countersunk screws securing the top carpet panel to the drawer.

Lift the carpet panel off the drawer.



Using a T27 torx bit, remove the 3 outer screws from the end of the 2 x extrusions inside the drawer.

Remove the 2 small "L" shaped plates with the plastic wedge still attached. (LH & RH)

Remove the inner and outer trolley assembly from the cabinet.



At this point, refer to the vehicle specific side floor kit installation instructions for the appropriate details on hat mounting positions on the base of the cabinet.

Note that the kitchen cabinet must have 4 x bolts securing it the vehicles floor, (2 bolts in each hat mount).

Install 2 washers between drawer and bracket




Note that the installation of the SBRK-1 will be different when installing the RDK.

Install 2 M6x16 black pan head screws from inside the drawer cabinet.

Place 2 washers over the screws on the outside of the cabinet.

Install the bracket over the screws then secure using 2 M6 nuts.

### INSTALLATION PROCEDURE

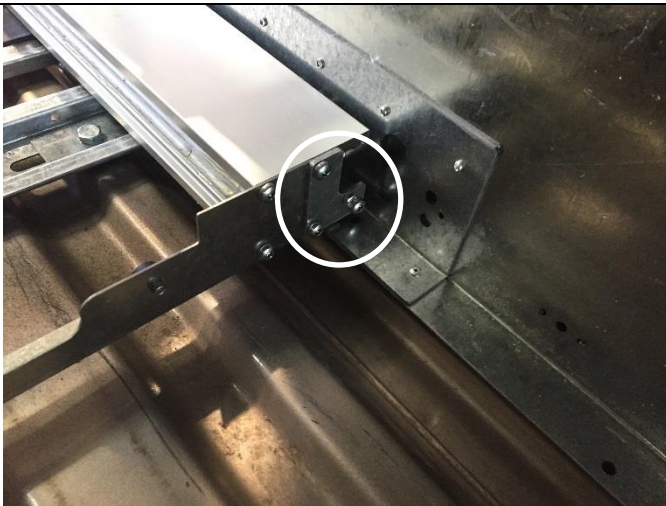

Re-install the inner and outer trolley assembly to the cabinet.

Re-install the 3 outer screws to the end of the extrusion inside the drawer securing the 2 small "L" shaped plates with the plastic wedge still attached. (LH & RH)



**When installing trolley back into cabinet, push lock out down to let the extrusion pass over the lever.**



Check operation of the kitchen by:

- Pulling out the kitchen, ensuring the kitchen locks in the fully open position and can only be closed by manually operating the second stage lock out lever.
- Rotating the front shelf latch, extending the shelf out fully and rotating the latch back up to prevent the shelf from rolling back in.
- Pushing the drawer latch to the side and pulling out the drawer.

Return shelf and drawer to their closed positions and return the entire unit to the drawer.