



FITTING INSTRUCTIONS

Part Number: **3950200, 3950210, 3950220 & 3950230**
Product
Description: **JEEP WRANGLER JK DELUXE BULL BAR**
Suited to
vehicle/s: **CHRYSLER WRANGLER JK JEEP 2006 ON**
Optional kits: **3550140 CRUSH CAN EXTENDER KIT (USA market only)**
3550030 FOG LIGHT INSERT COVER KIT
3550120 3550170 NON-WINCH COVER KIT

WARNING

REGARDING VEHICLES EQUIPPED WITH SRS AIRBAG:

When installed in accordance with these instructions, the front protection bar does not affect operation of the SRS airbag.

ALSO, NOTE THE FOLLOWING:

- ◆ This product must be installed exactly as per these instructions using only the hardware supplied.
- ◆ In the event of damage to any bull bar component, contact your nearest authorised ARB stockist. Repairs or modifications to the impact absorption system must not be attempted.
- ◆ Do not use this product for any vehicle make or model, other than those specified by ARB.
- ◆ Do not remove labels from this bull bar.
- ◆ This product or its fixing must not be modified in any way.
- ◆ The installation of this product may require the use of specialized tools and/or techniques
- ◆ It is recommended that this product is only installed by trained personnel
- ◆ These instructions are correct as at the publication date. ARB Corporation Ltd. cannot be held responsible for the impact of any changes subsequently made by the vehicle manufacturer
- ◆ During installation, it is the duty of the installer to check correct operation/clearances of all components
- ◆ Work safely at all times
- ◆ Unless otherwise instructed, tighten fasteners to specified torque

ARB 4x4 ACCESSORIES

Corporate Head Office

42-44 Garden St
Kilsyth, Victoria
AUSTRALIA 3137

Tel: +61 (3) 9761 6622
Fax: +61 (3) 9761 6807

Australian enquiries
North & South American enquiries
Other international enquiries

sales@arb.com.au
sales@arbusa.com
exports@arb.com.au

www.arb.com.au

GENERAL CARE AND MAINTENANCE

By choosing an ARB Bar, you have bought a product that is one of the most sought after 4WD products in the world. Your bar is a properly engineered, reliable, quality accessory that represents excellent value. To keep your bar in original condition it is important to care and maintain it following these recommendations:

Prior to exposure to the weather your bar should be treated to a Carnauba based polish on all exposed surfaces. It is recommended that this is performed on a six monthly basis or following exposure to salt, mud, sand or other contaminants.



As part of any Pre Trip Preparation, or on an annual basis, it is recommended that a thorough visual inspection of the bar is carried out, making sure that all bolts and other components are torqued to the correct specification. Also check that all wiring sheaths, connectors, and fittings are free of damage. Replace any components as necessary. This service can be performed by your local authorized ARB Stockist.

FITTING REQUIREMENTS

REQUIRED TOOLS FOR FITMENT OF PRODUCT:

BASIC TOOL KIT	MASKING TAPE
MARKER PEN	SOLDERING IRON AND SOLDER
TORQUE WRENCH	ELECTRICAL TAPE OR EQUIV.
ANGLE GRINDER WITH CUTTING WHEEL	FLAT FILE
POWER DRILL ½" CAPACITY	DIRLL BITS: Dia 12.0

HAVE AVAILABLE THESE SAFETY ITEMS WHEN FITTING PRODUCT:

Protective eyewear		Hearing protection	
--------------------	-------------------------------------------------------------------------------------	--------------------	---------------------------------------------------------------------------------------

NOTE: 'WARNING' notes in the fitting procedure relate to OHS situations, where to avoid a potentially hazardous situation it is suggested that protective safety gear be worn or a safe work procedure be employed. If these notes and warnings are not heeded, injury may result.

FASTENER TORQUE SETTINGS:

	SIZE	Torque Nm	Torque lbft
	M6	9Nm	7lbft
For plastic buffers	M6 (trilobial)	6Nm	4.4lbft
	M8	22Nm	16lbft
	M10	44Nm	32lbft
	M12	77Nm	57lbft
	3/8"	44Nm	32lbft

PARTS LISTING			
APPLICATION.	PART NO.	QTY	DESCRIPTION
WINCH FITMENT KIT	6151357	2	BOLT SEMS M10 X 30 ZP GRADE 8.8
	180302	10	CABLE TIE 4.8 X 180MM BLACK
	6151073	4	BOLT HX HD 3/8" x 1.5 GR8.8 TZP480
	4581040	4	WASHER FLAT M10 X 25 X 3 ZP
	6151321	2	NUT FLANGE M10
CHASSIS MOUNTING KIT	6151357	8	BOLT SEMS M10 X 30 ZP GRADE 8.8
	6151168	2	BOLT M12 X 1.75 X 80MM
	4581050	2	WASHER SPRING 1/2"
	4581049	2	WASHER FLAT 1/2"
	3199848	2	NUT PLATE CAGED M12
	6151305	2	NUT CAGED M12 X 1.75
	5848346	2	PACKER JEEP
CONTROL BOX BRACKET KIT	6151262	2	BOLT M8 X 20MM BLACK
	4581075	2	WASHER FLAT M8 BLACK
	3756262	1	CONTROL BOX BRACKET
	6151132	2	NUT FLANGE M8
LIGHT BRACKET KIT	3759320/3759337	2	BRACKETS LIGHTS BOLT ON
	4581075	8	WASHER FLAT M8 BLK ZN
	6151547	4	NUT HEX NYLOC M8 x 1.25 GR8.8 ZP
	6151234	4	BOLT M8 x 1.25 x 25 Gd 8.8 BP
BUFFER KIT	3163008	2	BUFFER JEEP WRANGLER
	6151372	8	SCREW PLASTITE, TRILOBIAL 14-10X1
FOG LIGHT INSERT COVER KIT (ACCESSORY Part No. 3550030)	3199960	2	PLATE FOG LIGHT COVER JEEP
	3162468	2	INSERT FOG INDICATOR SURROUND
	6151317	8	SCREW #8 - 18 X 5/8" PAN HD
NON-WINCH PAN COVER KIT (ACCESSORY Part No 3550120/3550170)	6151132	4	FLANGE NUT M8
	3314930/3314963	1	PAN COVER
	6151021	4	BOLT M10 X 1.5 X 20 HEX HD GR8.8 ZP
	4581307	4	WASHER FLAT, M8 X 20 X 2 BLK ZN
FOG LIGHT FITTING KIT	6151262	4	BOLT M8 X 1.25 X 20 Gd 8.8 BZ
	4581075	4	WASHER FLAT, M8 BLK ZN
	4584294	8	WASHER FLAT M4X9X0.85 TZP 480
	6151132	4	FLANGE NUT M8
	3757531	1	BRACKET FOG LIGHT JEEP LH
	3757531R	1	BRACKET FOG LIGHT JEEP RH
	6151404	8	NUT FLANGE M4
	6821184	1	1300MM RED WIRE LOOM
	6151254	8	SCREW PAN HD M4X20
	180701	8	SCOTCH LOK

NUMBER PLATE BRACKET ASSEMBLY	3757049	1	BRACKET NUMBER PLATE PIVOT
	3757048	1	BRACKET NUMBER PLATE MOUNT
	5848302	2	PACKER RB NYLON
	6151128	4	NUT FLANGE M6 X 1.0 XP
	6151223	2	NUT NYLOC M6 X 1.0 BZ
	6151256	2	SCREW BUTTON HD M6 X 16 SS
	4584327	8	WASHER F M6 X 16 X 1.2 BTZP 480
	6151213	4	BOLT M6 X 1.0 X 20 GD 8.8 ZP
WING BRACE FITTING KIT	6151464	8	SCREW BTN HD M8 x 16 BLK ZP
	4581075	8	WASHER FLAT, M8 (5/8") BLK ZN
	6151132	8	FLANGE NUT M8
	4681472L/4681483L	1	BRACE WING LH
	4681472R/4681483R	1	BRACE WING RH
CRUSH CAN EXTENDER KIT (ACCESSORY Part No. 3550140)	3759295	2	CRUSH CAN EXTENSION
	6151143	6	SCREW WAFER HD 10-32 SELF DRILL
FOG LIGHT INSERT COVER KIT (ACCESSORY Part No. 3550030)	3199960	2	PLATE FOG LIGHT COVER JEEP
	3162468	2	INSERT FOG INDICATOR SURROUND
	6151317	8	SCREW #8 – 18 X 5/8" PAN HD
NON-WINCH PAN COVER KIT (ACCESSORY Part No 3550120/3550170)	6151132	4	FLANGE NUT M8
	3314930/3314963	1	PAN COVER
	6151021	4	BOLT M10 X 1.5 X 20 HEX HD GR8.8 ZP
	4581307	4	WASHER FLAT, M8 X 20 X 2 BLK ZN

FITTING PROCEDURE



1. Remove plastic bumper from the vehicle including all hardware located behind it.

Note: Vehicle shown in Figure 1a is not fitted with fog lights.



Note: Jeep Wrangler JK comes in three Different versions of bumper bars:

- i) No fog lights.
- ii) Fog lights positioned inboard.
- iii) Fog lights positioned outboard.

Figure shows bumper variants offering fog lights ii) & iii).



FITTING PROCEDURE



For vehicles fitted with crush cans (USA market) follow steps 2 and 3, for vehicles not fitted with crush cans, skip to step 9

2. Remove impact beam from chassis



4 3/4 INCHES

7 INCHES

3. Once impact beam is removed, mark out a 175x120mm section onto the impact beam on both sides.





- Carefully cut marked section using an angle grinder fitted with a turbo disc.



Warning: Drilling operations can result in flying metal debris, safety glasses should be worn.




- Retain crush cans and dispose of the impact beam.



- Clean up any sharp edges or burs with a file.
- Apply black spray paint to cut edges to prevent corrosion.


FITTING PROCEDURE

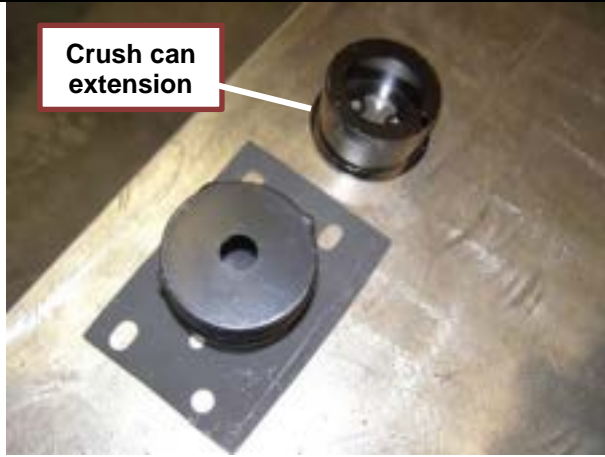


8. Attach crush can extensions supplied with bull bar to crush cans using 6x self-drilling screws supplied with crush can extension fitting kit

ACCESSORY Part No 3550140 (3x screws per crush can).

Note: When attaching crush can extensions to crush cans, ensure both parts are concentric to one another.

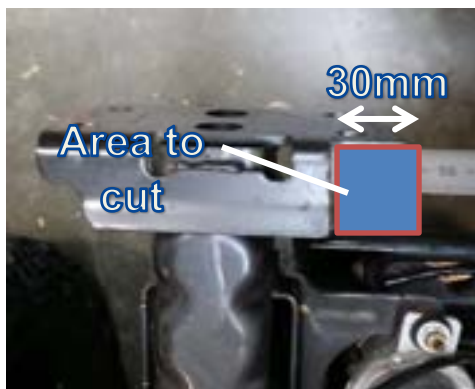

LHS chassis rail shown

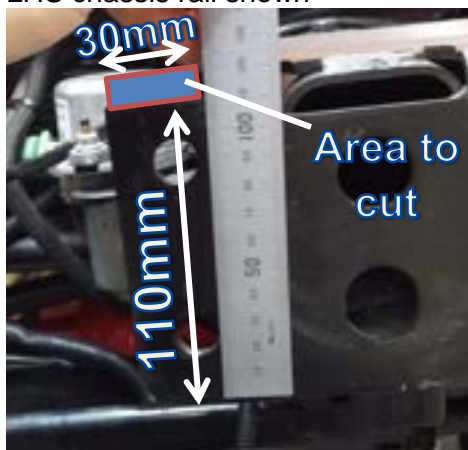

LHS chassis rail shown


For applications where winch is not going to be fitted, skip step 9 below.

9. Removal of material to fit winch
 - a) Mark section on chassis rail front mounting face with reference 110mm from bottom edge (horizontal marking) and 35mm from inside edge (parallel to longitudinal axis of vehicle).
 - b) Carefully cut marked section using an angle grinder fitted with a turbo disc.
 - c) Clean up any sharp edges or burs with a file.
 - d) Apply black spray paint to cut edges to prevent corrosion.



Warning: Drilling operations can result in flying metal debris, safety glasses should be worn.

FITTING PROCEDURE

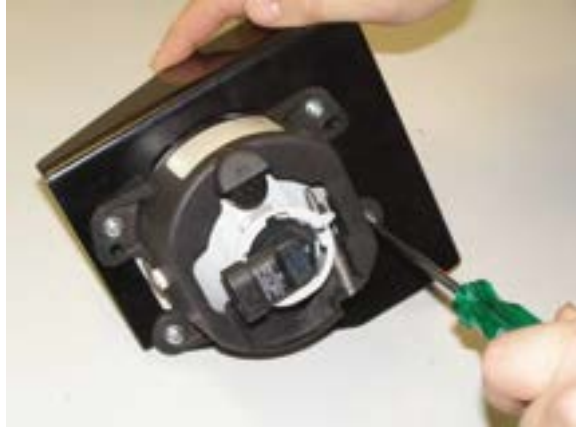

LHS assembly shown


For Vehicles not fitted with fog lights, use fog light insert cover kit **ACCESSORY Part No. 3550030** in place of fog light for the following installation procedure.
(Refer to Figures on next page)

10. Secure fog lights to mounting brackets using M4 fasteners supplied with fog light fitting kit **ACCESSORY Part No 6172261**.



LHS assembly shown

11. Secure fog light assembly to bull bar using M8 fasteners supplied with fog light fitting kit.

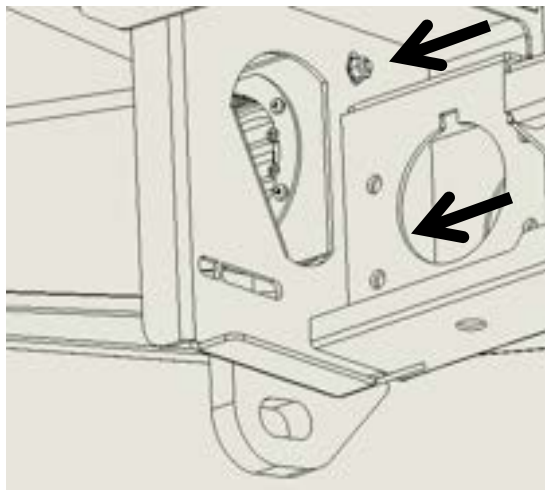

LHS assembly shown

12. Adjust fog light so that it sits central to the fog light aperture in the bull bar.
13. Tighten both bolts on each side of bar to the torque specification on page 2.



Image of fog light fitted to vehicle (from front)

Figure to the left shows what the bull bar should look like once all fog light components are installed correctly.

Note: Final vertical adjustment of the fog light can be carried out using a Torx T20 key once the bull bar is fitted to the vehicle.


FITTING PROCEDURE



LHS assembly shown



LHS assembly shown

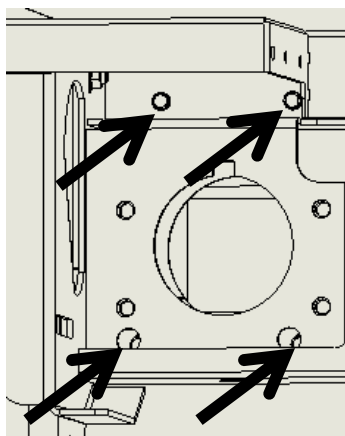


14. Fitting buffers

- a. Position bar on a flat surface upside down so that you have access to both front and rear sections of the bull bar.
- b. Fit buffers to the bar by holding each buffer against the front of the bull bar and securing from the rear using 8x 6mm trilobial screws supplied with buffer kit (4 per buffer).



FITTING PROCEDURE

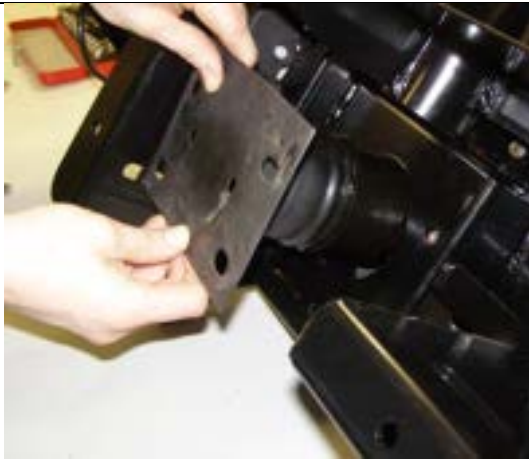

15. Position crush cans into mounting bracket openings located at the rear of the bar.


Note: To hold crush can plate into position as bull bar is offered to the vehicle later on in the installation process, smear a small amount of silicon onto mounting face.



16. Loosely fasten bull bar to vehicle chassis using M10 fasteners supplied in chassis mounting kit.

Note: If your vehicle is not going to be fitted with a winch, install pan cover kit **ACCESSORY Part No 3550120/355170** to bull bar before mounting bull bar to vehicle chassis.

(Refer to Figure below)

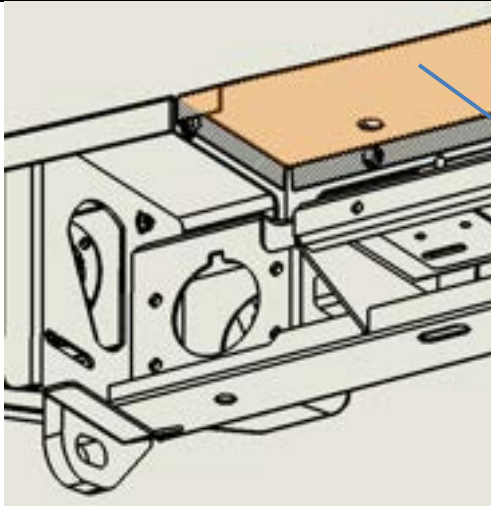

Pan
Cover

FITTING PROCEDURE



LHS Shown

For vehicle models 2010 onwards, the following (step 17) is required. For all other models skip to step 18.

17. Using the bull bar bracket shown in image as a guide, carefully drill through the chassis rail side bracket using a 12mm or 1/2inch drill bit. Ensure that drill is aligned with rear of the bull bar bracket slot as shown before drilling.



Warning: Drilling operations can result in flying metal debris, safety glasses should be worn.



18. Position packers in between bull bar mounting bracket and chassis (at rear most slot in bracket). Loosely fasten bull bar to chassis sides using M12 fasteners supplied.

Note: Bend tail of captive nut plate to help guide it into chassis rail.



LHS Shown



RHS Shown

FITTING PROCEDURE



19. Tighten all chassis mounting fasteners to correct torque specifications listed on page 2.
20. Tighten M10 fasteners first and then proceed to tighten M12 fasteners.
21. Once all fasteners are torqued, break off nut plate tail protruding below cross member using a pair of pliers.



For vehicles not being fitted with a number plate, skip steps 22 & 23.


22. Assemble number plate components supplied with number plate fitting kit as per Figure 14. Ensure assembly is not over tightened so that it may pivot with reasonable amount of friction.





23. Mount number plate bracket assembly to bull bar using M6 fasteners supplied with number plate fitting kit.

WINCH INSTALLATION – FITTING PROCEDURE

FOR ALL WARN WINCHES UP TO XP9.5 INCLUDING ZEON, SMITTYBUILT, MAGNUM AND BUSHRANGER

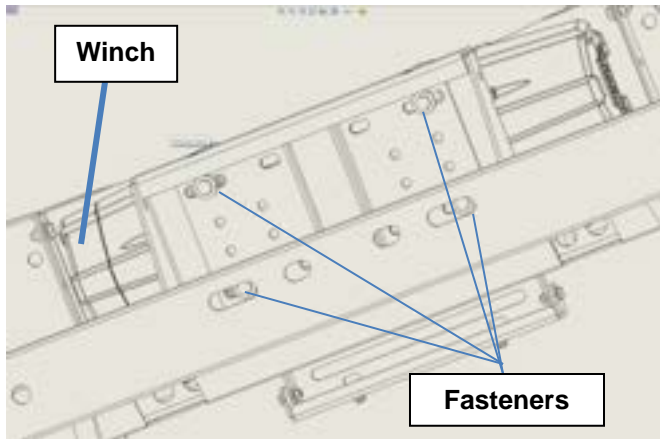

24. Lower winch onto bull bar mounting platform carefully aligning with slots.
Fit 3/8" nuts into winch retaining cavities if applicable.
Loosely fasten winch into position from underneath the vehicle.
Check lateral alignment of winch relative to bull bar.
Tighten fasteners to torque specification listed on page 2.

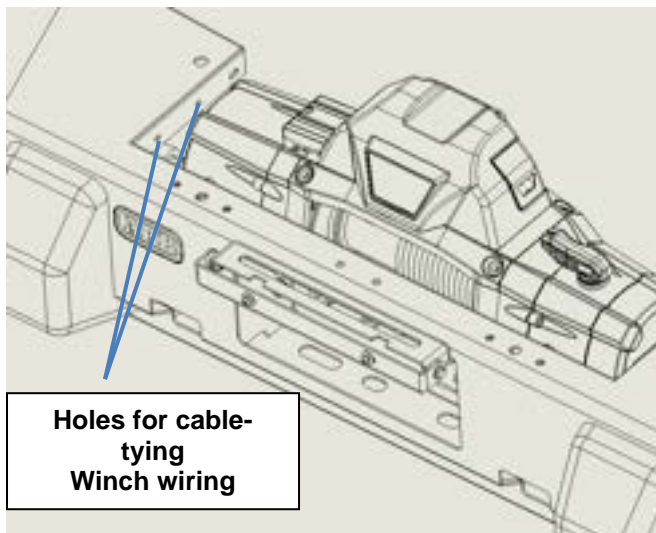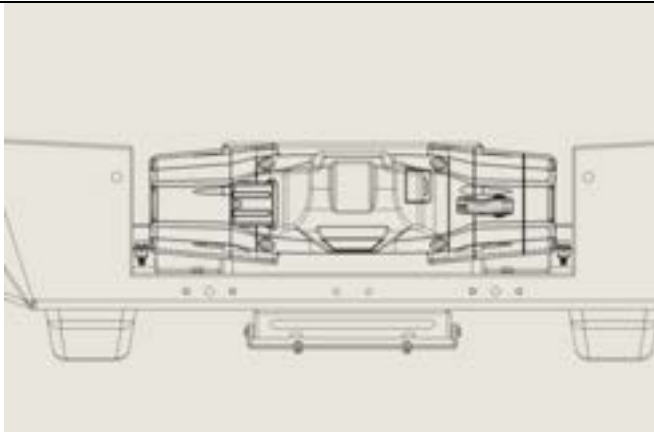

25. Use cable ties to fix winch power cables to pan to tidy up area.


FITTING PROCEDURE



For winch models that come with a control box to be mounted separately to the winch, complete step 26.


26. Fit control box bracket to bar using M8 fasteners supplied with control box bracket kit. Fit control box to control box bracket using fasteners supplied with winch as per winch supplier fitting instructions.

Note: Use cable ties to keep power cables together and keep clear of all moving components and sharp edges.

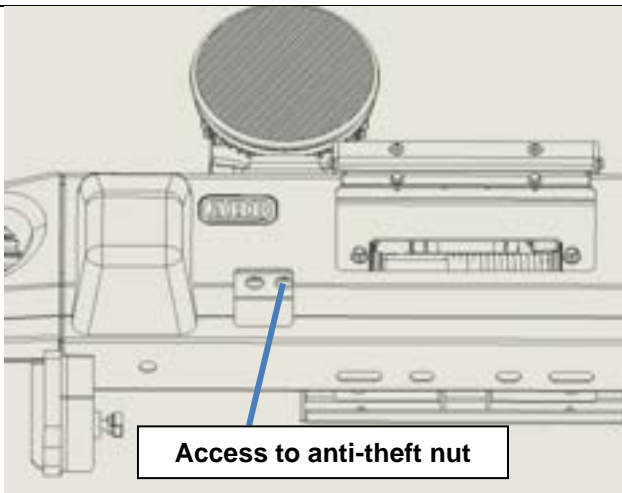

If the vehicle is to be fitted with ARB intensity LED driving lights, refer to step 27.


27. Position driving lights onto bull bar aligning holes in bracket with those on top surface of bull bar. Fasten driving light brackets using M8 fasteners supplied with light bracket kit. A socket extension will be required to fasten M8 nyloc nuts, accessing through the HiLift mount opening. Fasten anti-theft nut and M12 bolt using Intensity pinned socket supplied with ARB Intensity driving light kit.

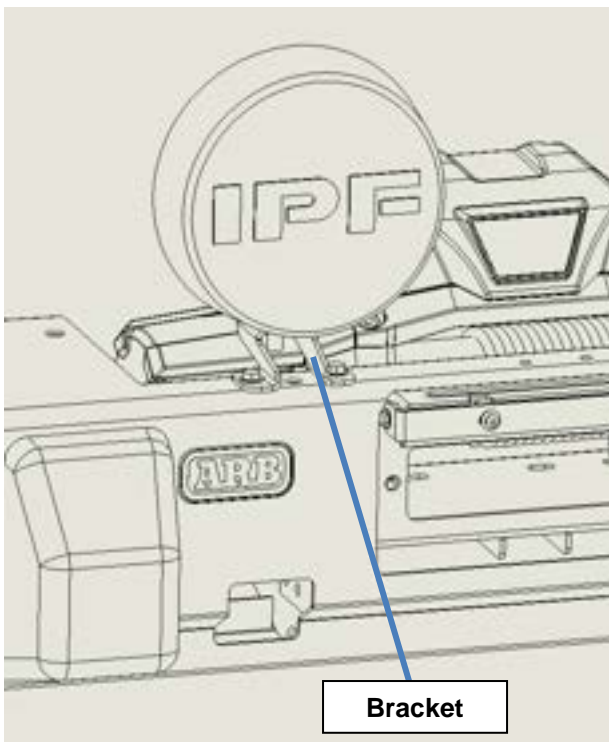

If the vehicle is to be fitted with IPF driving lights, refer to step 28.

28. Fasten driving light brackets to bull bar using M8 fasteners supplied with light bracket kit. Fix driving lights to brackets using fasteners supplied with IPF driving light kit.

FITTING PROCEDURE

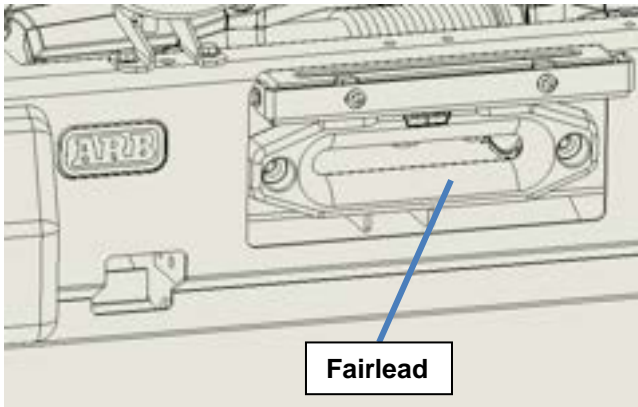


For vehicles fitted with a winch, refer to step 29.

29. Fit the fairlead to the bull bar using M10 fasteners supplied with winch fitment kit.



Roller Fairlead installed

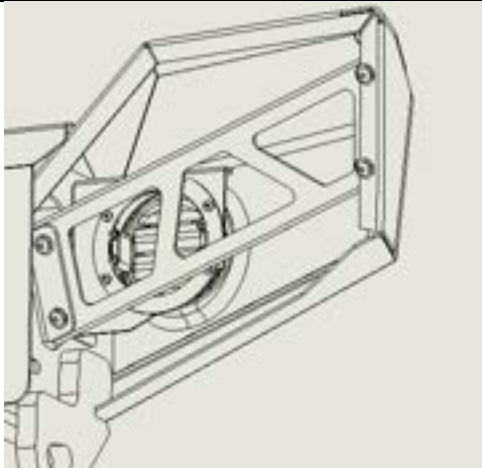

RHS Shown

30. Fit wing braces to bull bar using M8 fasteners supplied with wing brace fitting kit. Tighten fasteners to torque specifications outlined on page 2.



For vehicles fitted with **INBOARD** fog lights, complete step 31.


31. Cut 1300mm length of red wire supplied with bolt kit into four equal lengths of 325mm each.

Cut off the fog light plugs from the vehicle loom leaving approximately 100mm of wire on the ends of the plugs.

Using scotch lok fasteners supplied in the bolt kit, fasten the red wire lengths in between plug ends and vehicle loom.

Use cable ties to secure all wiring.

FITTING PROCEDURE

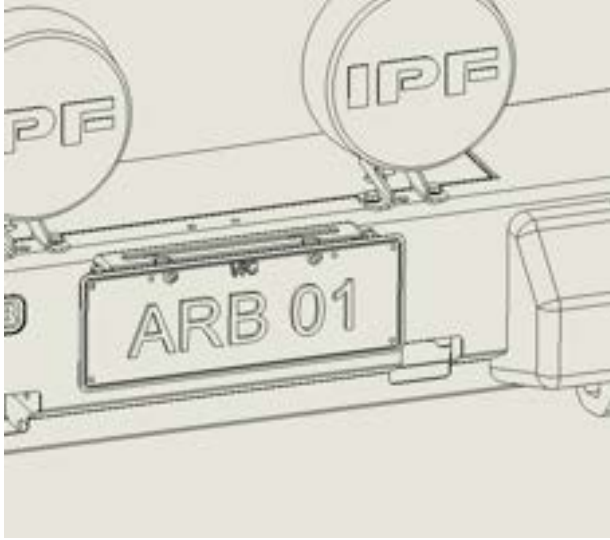

32. Bolt number plate to number plate bracket using M6 fasteners supplied with number plate assembly kit.
Torque to specification listed on page 2.

FITTED PRODUCT – Shown with Warn Zeon winch

